

NEW
Listo

Unleash a longer Journey



• Specs & Features


• OEM Capabilities

• Filling and Assembly Instructions

PRODUCT OVERVIEW




Capacity: 350mAh
Oil Tank Design
316L Stainless Steel Internals
Plastics Mouthpiece
Light Feedback
Charging Enabled
Customization
10 ml
97.8H x 22.3W x 10.8D (mm)

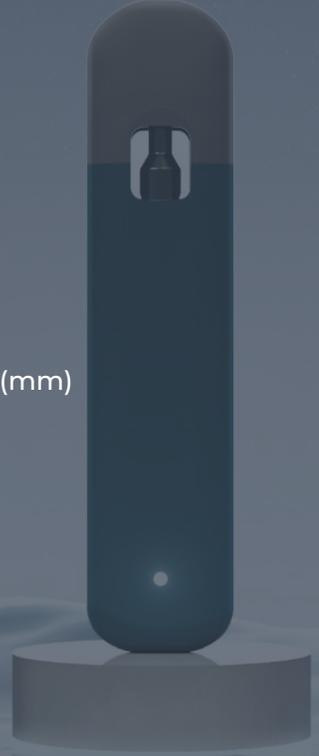

Left Side



10.8mm

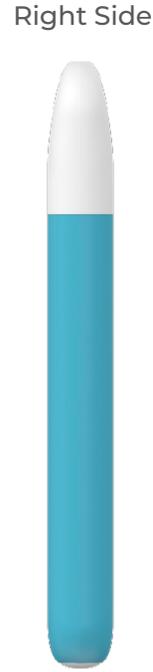

Bottom




1.0ml

LARGER STORAGE, SMALLER BODY

With the Listo, CCELL offers you everything you could ever ask for in a disposable. The 1ml large tank is designed with 350mAh built-in battery and a rechargeable USB port to assure your enjoyment until the last drop. Featuring a transparent visible oil tank, allowing you to know the amount of oil anytime at a glance. So if you're looking for compact disposables with great volume, you've found them.

- 
- Two CCELL Listo pens are shown vertically in the center-left of the image. The one on the left is white and is shown from the back, featuring a rectangular button and a small circular LED indicator light at the bottom. The one on the right is teal and is shown from the front, revealing a silver-colored metal mouthpiece and a clear window that shows the internal oil tank. Both pens have a rounded, ergonomic design.
- The combination of a visible oil tank and compact design that give Listo a distinctive elegance and allows total customization.
 - It's 350mAh battery with a handy rechargeable feature, double guarantees for long lasting sessions till the last drop for a zero waste and effortless experience.
 - Listo's interior engineered with medical-grade 316L Stainless Steel materials ensures every inhale secure and delightful.
 - Born to be your personal companion, Listo features a LED indicator light for you to get notified of its status simply at a quick glance.

• **DS2710-U OEM Capabilities**

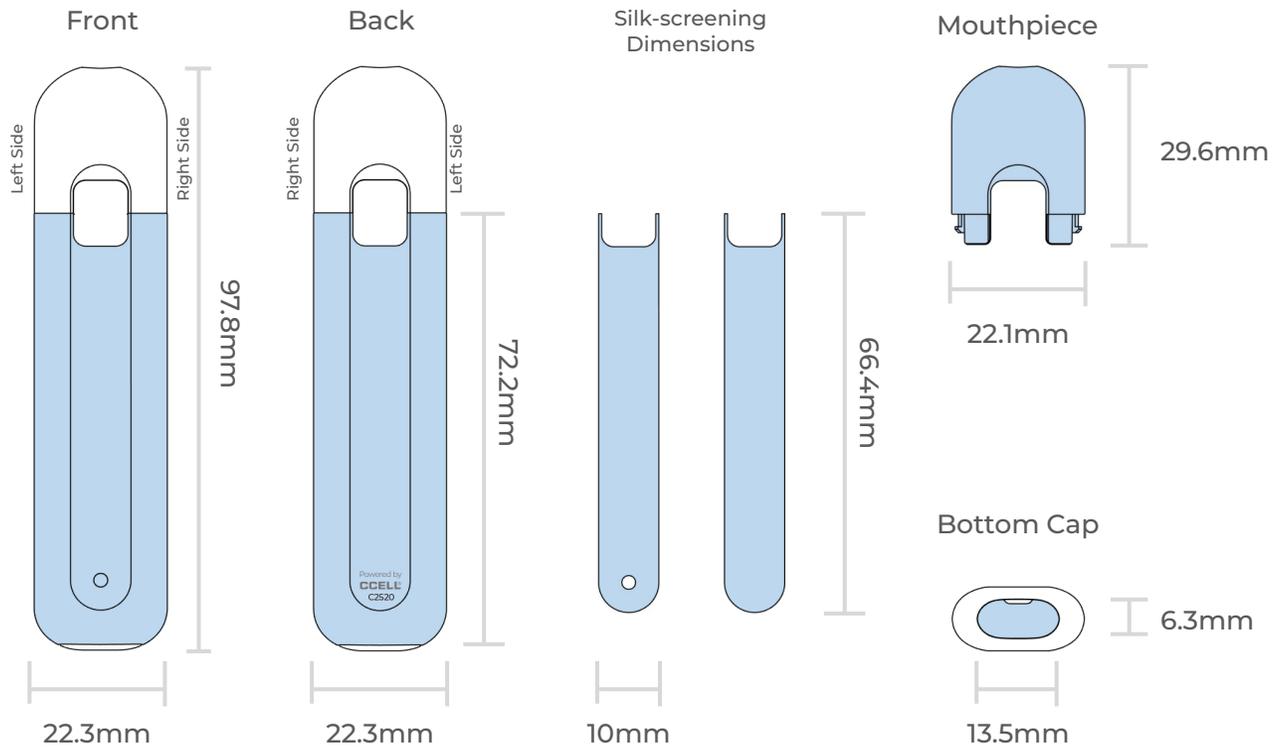

• **Mouthpiece**

Material: Food-grade PCTG (FDA-approved)

OEM Options: Injection molding

• **Battery Case (Front & Back)**

Material: Plastics

OEM Options: Silkscreen printing, Injection molding, laser craving

Silkscreen printing and laser craving

OEM Dimensions: 66.4H x 10W (mm) – Front

66.4H x 10W (mm) – Back

Injection molding

OEM Dimensions: 72.2H x 22.3W (mm) – Front

72.2H x 22.3W (mm) – Back

• **Bottom Cap**

Material: Silicon

OEM Options: Injection molding

• **Filling and Assembly Instructions**

0.5ml for each side



STEP ONE

Insert a filling needle into the space between the airway and the outer wall of the reservoir. With Listo held upright fill both two sides next to airway with 1ml of oil (0.5ml for each side).

***Do not overfill or it will cause a short circuit.**



NG




OK

STEP TWO

Check if the silicon sealing ring on mouthpiece is set in place.

Aligned with reservoir horizontally

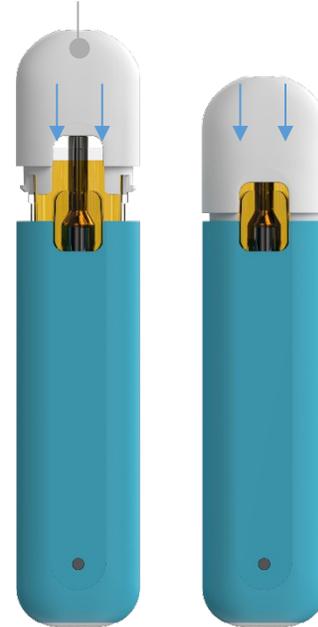

STEP THREE

Place the mouthpiece on top of Listo aligned with reservoir horizontally and press it in position.

**Failure to insert the mouthpiece within 1 minute may cause leakage.*



STEP FOUR

Check if the mouthpiece is pressed in completely and properly.

**Let filled Listo sit for at least 30 minutes before using.*

• Packaging Solution



Front



Back

NEW
Listo

Unleash a longer journey



FOLLOW US @CCELLOFFICIAL



WWW.CCELL.COM

