

# Mini Tank

Small Size, Supreme Experience



\*Mini Tank has four model options. More details are available in this collateral.



## **Palm-Sized & Perfectly Stealthy**

Mini Tank AIO devices are made to be extremely small so you can conceal them within the palm of your hand, eliminating undesired attention and keeping consumption as discreet as possible.

## No More Leaks or Loud Pockets

By sliding the switch\* to the “off” mode, you can not only prevent oil leakage and debris from entering the device, but also seal off scents emanating from the oil within.



Anti-leakage



Aroma seal-off

\*Optional feature



## Clog-Free, Hassle-Free

The dual air vents built into every Mini Tank ensure a seamless extract vaporization experience every time. Enjoy cloud-filled, uninterrupted sessions without any annoying clogs!



## Isolated Airway, Clean Vapor

The airway within the Mini Tank is designed to be isolated from the battery, PCBA, and other electronic components, ensuring the cleanest and safest possible vapor in every inhale.



## Specs

- Tank volume: 0.5ml/1ml
- Battery capacity: 200mAh
- Dimensions: 63H x 36W x 15D (mm)  
2.5H x 1.4W x 0.6D (in)
- Extremely compact and discreet body
- Aroma seal-off and anti-leakage switch (optional)
- Clog-free dual air vents
- Clean vapor and enhanced safety via isolated airway
- Inhale activated
- USB-C charging
- Available for customization



## with slide switch



Mint Green



Black

## without slide switch



Mint Green




Black

# Model Options



Mini Tank	●		
Mini Tank-AC	●		●
Mini Tank-EM		●	
Mini Tank-EM-AC		●	●

# OEM Capabilities





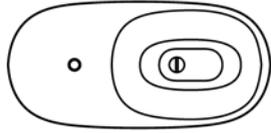


Right

Front

Left

Back

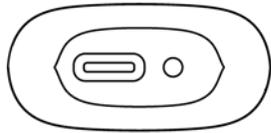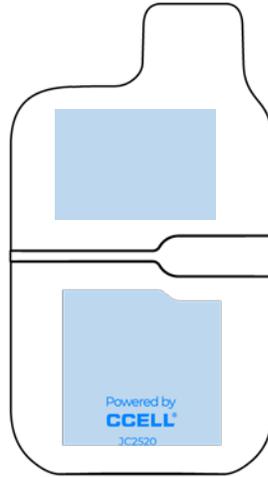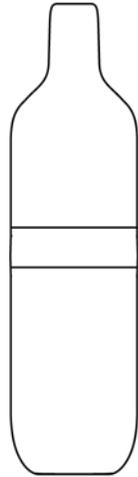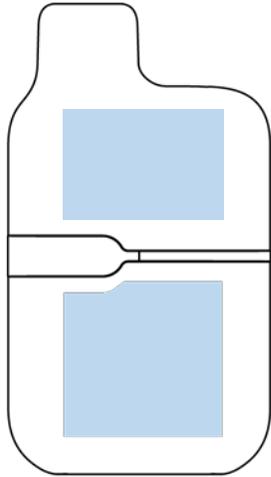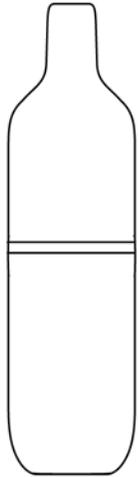

## **Mouthpiece**

OEM Option: Injection molding

## **Battery Case**

OEM Options:

Injection molding, silkscreen printing, pad printing, digital printing, laser engraving, spray painting

\*MOQ required to customize the color of the Battery Case. For more info, please contact your sales rep.

# Filling and Capping Instructions



## STEP 1

Place the preloaded battery tray onto the baseboard.



## STEP 4

Place the preloaded mouthpiece tray onto the deflector. Gently tamp down the mouthpieces to ensure they are aligned with the batteries.



## STEP 2

Put the deflector over the tray.




## STEP 5

Place the gland plate on top.



## STEP 3

Fill oil into the reservoirs.

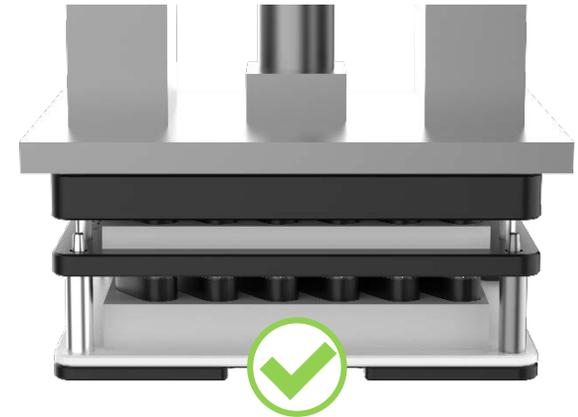

## STEP 6

Press with machine to seal off the filled devices.

\*Capping force required: 3-5 kN for capping 18 devices at a time; 100-200 N for capping one single device.

# Mini Tank

Small Size, Supreme Experience



FOLLOW US @CCELLOFFICIAL



WWW.CCELL.COM

CCELL DOES NOT PRODUCE, DISTRIBUTE OR SELL ANY MATERIAL FILLED IN CARTRIDGES AND OIL TANKS. NOT FOR SALE TO MINORS.